


VISIT US AT : WWW.NWSEATCOVERS.COM
VISIT US AT : WWW.SCCNORTHWEST.COM

FRONT SEAT COVERS

1 HEADREST REMOVAL


Remove the headrest by pushing the button. If there is a pinhole instead of a button, insert the longer, straight end of an "s" clip into the pinhole of the bracket.

DO NOT remove active headrests, use the velcro opening at the top of backrest cover for easy install

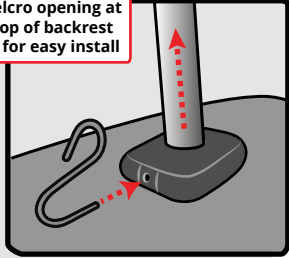

2 CUSHION COVERS



IMPORTANT: always tighten straps by pulling on them **BEFORE** the buckles to prevent excess strain on the buckles.

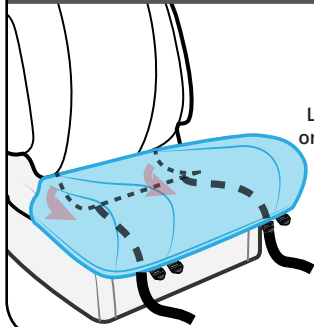

Locate the northwest tag stitched on the outside of the cushion covers. These tags identify the doorside of the seat that they should be placed on. Push straps between the backrest and cushion, then towards the front under the seat.

3 STRAPS & BUCKLES


Insert straps into the outer buckles. Pull the straps downwards and tighten. Attach the elastic loops at the back end of cushion cover with an "s" hook to the underside of the seat.

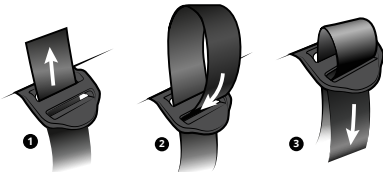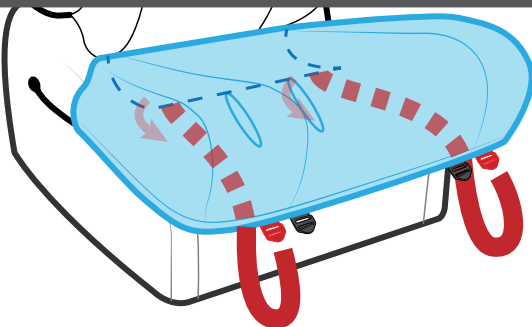


4 HOOK & LOOPS

Pull chord end closest to the door through the space between the backrest and seat cushion. Pull the loop at the opposing end around the side to the back of the seat.


PLEASE use eye protection when attaching elastics and hooks.

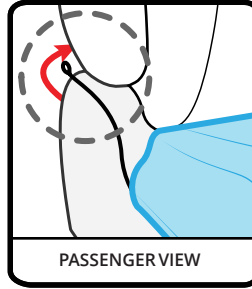

PASSENGER VIEW

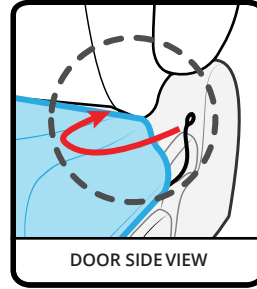


DOOR SIDE VIEW

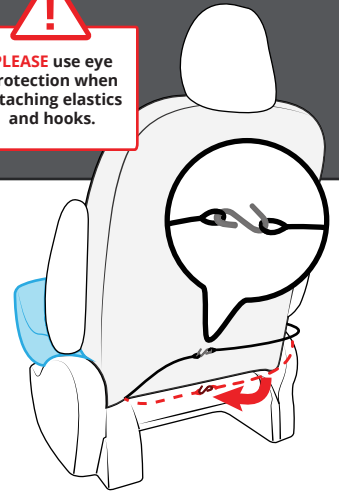

5 BACKREST COVER

Identify the driver and passenger backrest covers and pull them down over your backrests. If your backrests have large bolstered sides, it may be necessary to compact them with your hands until the covers are all the way down.

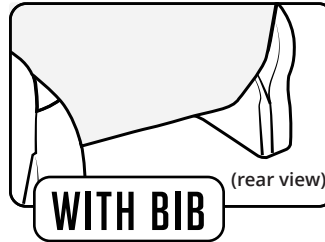

WITH BIB


If your hand can't pass through to the back between the backrest and cushion, your seat has a bib. The backrest cover will have straps on the front tab and elastics/velcro on the back. Push the straps between the backrest and cushion, and then attach them to the inner buckles. Attach the velcro strip at the back to the carpeting on the seat. Or, if there are elastics, attach them using the "s" clips to the underside of your cushion.

TIP FOR BETTER FIT:

While tightening straps/velcro, push downward on the backrest frontside to smooth wrinkles.



! If backrests have side impact airbag tags, make sure to install with the side airbag tags over the airbags.

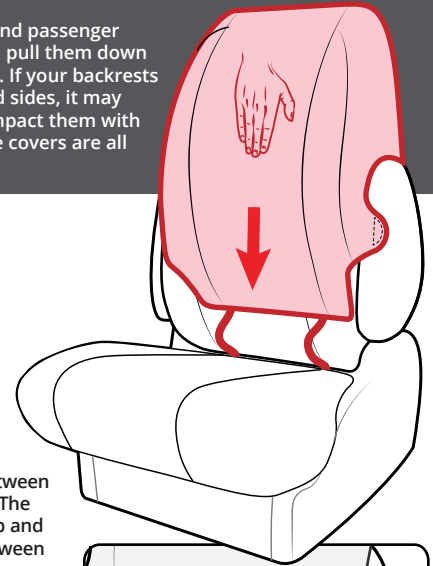


NO BIB


If your hand can pass through to the back between the backrest and cushion, your seat has no bib. Your backrest cover will have a carpeted tab and a velcro strip on the back. **Remove protective fabric from the velcro.** Push the front tab between the backrest and cushion to the back, and attach to velcro.

6 HEADREST HOLES

Due to pattern complexity, some covers require headrest holes to be made after installation. Material will not run, and covers are fully warranted.

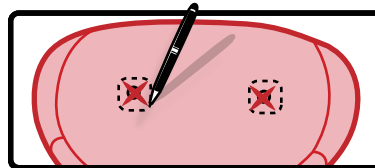

On the top of the backrest cover, mark with a pen an "x" over each headrest post.

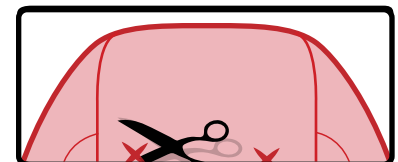

Pinch material, cut along the "x" markings, and tuck the material under the brackets.



REAR SEAT COVERS INSTALLATION


FOR TRUCKS



DO NOT remove active headrests, use the velcro opening at the top of backrest cover for easy install

1 HEADREST REMOVAL

Remove the headrest by repeating step one from front seat cover installation instructions.

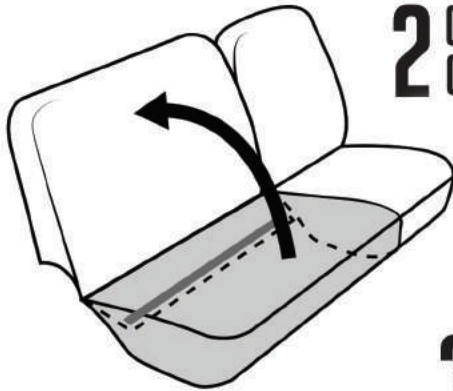

2 CUSHION COVER


Flip cushion up and slide the cover on. Attach carpet tab to the velcro strip. Adjust to fit.

3 BACKREST COVER

Tuck cover behind shoulder belt and tuck in cover at top, sides & bottom. Flip cushion(s) up. Attach any straps to the buckles at the bottom and

ATTACH ELASTICS * W/VELCRO TO THE CARPET ON THE CUSHION COVER.

Attach any elastics to seat w/s-hooks Flip cushions back down and adjust to fit.

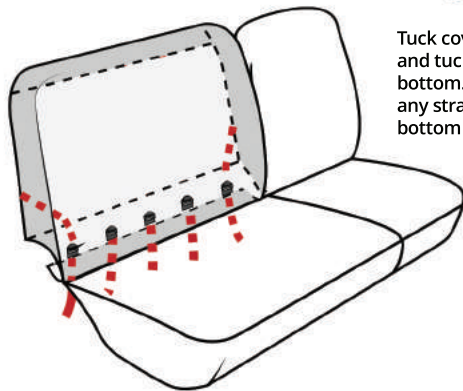

4 STRAPS & BUCKLES

If your backrest has straps, tuck them down behind the backrest (tilting cushions up will often move the backrest forward for better access.



FOR CARS




DO NOT remove active headrests, use the velcro opening at the top of backrest cover for easy install

1 HEADREST REMOVAL

Remove the headrest by repeating step one from front seat cover installation instructions.


2 BACKREST REMOVAL

Most seat cushions are removable and held on by pins (located on the front edge) that will allow the cover to be popped out. Feel around the front edge to locate the pins. If there is a latch, slide the latch until it releases. If you are unsure, call us or your service department for guidance.

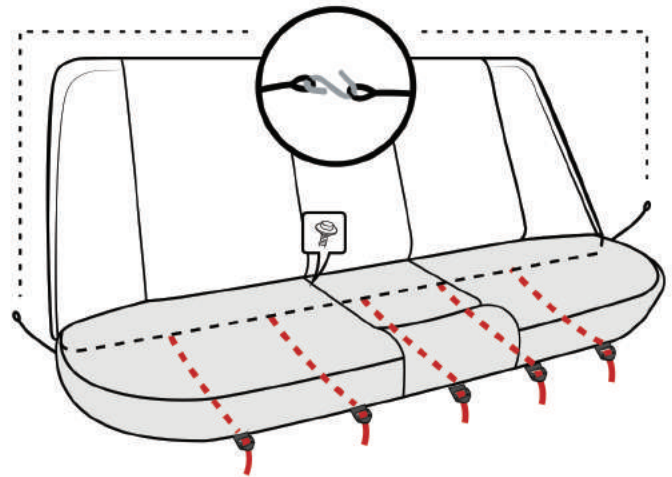

3 STRAPS & BUCKLES

Insert straps into their corresponding buckles. Pull the chord by their loops together, and connect with an "s" hook. Pull straps downwards to tighten.

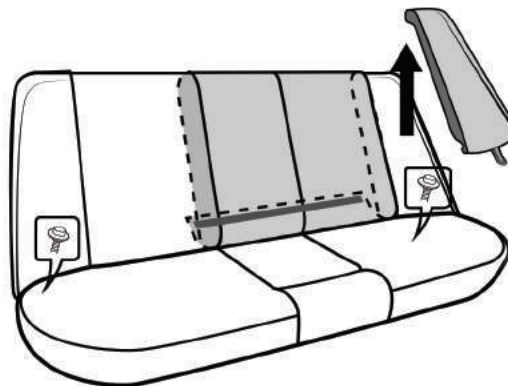

4 BACKREST COVERS

Backrest covers are usually full sleeve. Slide the backrest cover over the backrest and tuck the carpet tab to the back of the backrest cover and attach at the velcro. For backrest bolster covers, tuck the edges in and tighten the bungee cord to secure.

